

Congratulations on your purchase of a high-quality Insignia product. Your new digital picture frame represents the state of the art in digital picture frame design and is designed for reliable and trouble-free performance.

 
Package contents

- Digital picture frame
- AC power adapter
- Memory Stick Duo Pro adapter
- USB cable
- Remote control with battery (CR2025)
- Cleaning cloth
- CD-ROM with *User Guide*
- *Quick Setup Guide*

Features


- Displays digital pictures (JPEG format) and picture slideshows without a computer
- Displays pictures directly from an inserted memory card or USB device (not included)
- Bright, clear TFT LCD screen
- Compatible with a wide variety of memory cards, including SD, SDHC™, CompactFlash®, MMC™, Memory Stick®, Memory Stick Pro Duo™ (requires the supplied adapter), xD™, microSD™ (requires an adapter - not included)
- Compatible with USB flash drives
- Mini-USB connector to connect the digital picture frame to your computer
- Multi-image mode displays multiple pictures at the same time in a slideshow
- Auto Rotate—pictures are rotated based on the frame's orientation
- On-frame button controls and infrared remote control
- 1 GB internal memory

Sides

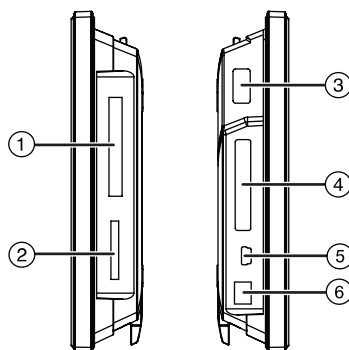


#	Description
1	Memory card slot (supports CompactFlash (CF))
2	Memory card slot (SD/SDHC/MMC/Memory Stick/Memory Stick Pro Duo/xD/microSD)
3	USB (type A) port
4	Remote control storage slot
5	Mini USB port
6	DC 12 V power connector. Plug the AC power adapter in here.

 Top

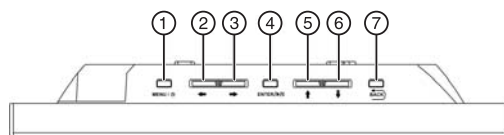

#	Description
1	Menu / Standby—press to open the <i>Setup</i> menu; Press and hold down for 2 seconds to put the frame into <i>Sleep</i> mode. Pressing any button on the frame or remote will wake up the frame.
2	Left arrow—press to move the menu selection left or to display the previous picture
3	Right arrow—press to move the menu selection right or to display the next picture
4	Enter/Play/Pause - press to select menu items. During a slideshow, press to pause or resume.
5	Up arrow—press to navigate up
6	Down arrow—press to navigate down
7	Back button—go back to the previous selection or screen

 
Back

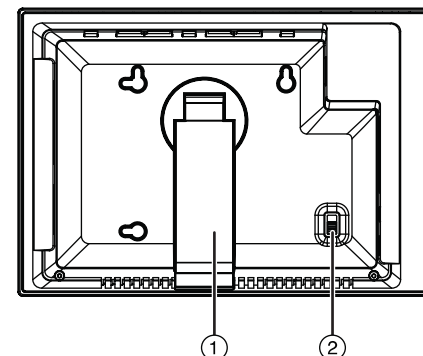

#	Description
1	Adjustable stand
2	Power On/Off switch


Setting up the remote control

 - Remove the plastic tab that extends past the bottom edge of the remote control. This tab protects the battery. The remote control will not work until it is removed.

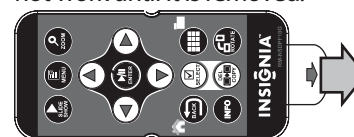


Setting up the frame

 - 1 Pull out the stand to set the frame in landscape orientation.
- 2 Turn the stand counterclockwise 90° to set the frame in portrait orientation.

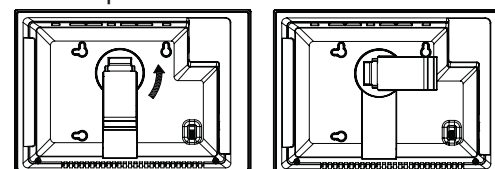

- 3 Plug the AC power adapter into the frame's DC power connector and into an AC power outlet.

 - 4 Extend the stand from the back of the frame, then place the frame on a flat surface. Adjusting the stand changes the frame's viewing angle.

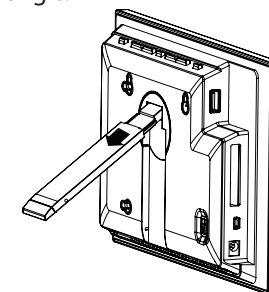

Slide the power switch to the **On** position. The frame turns on and automatically starts playing a slideshow of the pictures stored in internal memory. This slideshow is called Demo mode. To turn off Demo mode, point the remote control at the front of the frame and press **ENTER**.

Viewing pictures on a memory card or USB device

- Insert a memory card or USB device into one of the available memory slots or the USB port. A slideshow of pictures from the memory card or USB device automatically starts to play.

Caution: Memory cards fit into the card slots in one direction only. Do not force a memory card into a slot. The card should fit snugly when inserted correctly. Some cards require an adapter to fit correctly. For more information on supported memory cards, see "Specifications" in the *User Guide* on the included CD-ROM.

For more information about using your digital picture frame, see your *User Guide*.

Six-month limited warranty

See the *User Guide* on the included CD-ROM or visit www.insigniaproducts.com for details.

© 2009 Best Buy Enterprise Services, Inc. All rights reserved.